

Service Manual



Christini Technologies, Inc.
tech@christini.com

Version 2011-1.1

Warnings:

- Do not adjust the choke while the bike is moving!
- Do not over tighten the front axle as it can damage the inside Axle Clamp Bearings.
- Do not engage the AWD system while at high speeds. Disengagement of the AWD system can occur at any speed.

Table of Contents

Introduction; required tools	5
AWD detailed illustration	6
Routine maintenance schedule	7
AWD clutch test	8
AWD chain removal	9
AWD engagement switch	11
Front wheel removal	16
Front wheel service	18
Fork removal and installation	25
Dropout service	27
Fork spline bearing service	36
Boot Replacement	41
Triple clamp removal	43
Bottom triple clamp disassembly	47
Bottom taper bearing removal	52
Bottom triple clamp assembly	53
Top triple clamp disassembly	57
Top taper bearing removal	58
Top triple clamp assembly	59
Main drive shaft service	60
Headset bearing service	61
Triple Clamp Installation	64
Gearbox removal	68
Gearbox disassembly	69
AWD clutch removal	74
AWD clutch Service	75
Troubleshooting	79
Warranty	80

The Tools You Will Need for Maintenance

- Socket set, metric
- Pliers set
- Ball peen/ dead blow hammers
- Soft tip metal punch (brass/aluminum)
- Screw driver set
- AWD clutch wrench (optional)
- Open ended wrenches, metric
- Allen key set, metric
- Snap ring pliers, 45 or 90 degree
- Bearing punch set
- Blind side bearing removal kit (Motion Pro 08-0292)
- 2 large adjustable wrenches
- Torque wrench 0-75 ft-lbs
- Split bearing puller
- Small pick or awe
- Safety wire pliers
- Safety wire .032"
- Grease gun (included with frame kit. Fill with Shell grease)
- Shell Albida EP1 Lithium grease (do not substitute)
- Spectro SPL grease of equivalent
- Blue Loctite #242
- Red Loctite #262
- Green Loctite #609



Routine Maintenance

Pre-ride check list:

- Check secondary AWD chain tension.
- Lube secondary AWD chain.
- Check clutch setting with front wheel torque test (see next page).
- Check front wheel rim lock nut torque.

As Needed

- Replace bearings if excessive noise or friction develops.
- Lubricate spline shafts through grease port with supplied grease gun and Shell grease.
- Replace worn or damaged seals and boots.

AVOID:

- Pressure washing the dropouts, head tube area, side bar and main gearbox.

- Place the bike on a stand and make sure that the front wheel is not touching the ground.
- Shift the bike into gear.
- Turn the AWD switch to the on position and check to make sure the AWD is engaged.
- Grab the front wheel with two hands and try to spin it backwards. The front wheel should spin backwards but require a large amount of effort to do so. If the wheel will not break free, the clutch is set too high. If the wheel turns backwards very easily, the clutch is set too low.



- If the clutch needs to be adjusted, pull the gas tank off the bike. Loosen the set screw on the clutch locknut and turn the locknut in or out a 1/2 turn at a time until the front wheel moves backward with the correct amount of force. Make sure the set screw is positioned over a flat in the clutch hub and tighten the set screw down and reinstall the tank. (note: picture shows clutch off the bike for clarity).



Cover and Chain Removal

- Remove the 6 cover bolts with an 8mm socket or t-handle and pull cover off of the frame.



- To remove the chain, pull the tensioner back with a flat blade screwdriver and pull the sprocket out with fingers or non-marring pliers. Remove the chain from countershaft sprocket.



- Check the following:
 1. Sidebar bearing and cover bearing should be smooth turning.
 2. Check engagement spline action by engaging and disengaging switch on handle bars.
 3. Sidebar seal and cover seal for wear.
 4. Excessive wear on chain tension block.
 5. Make sure to check that the master link is installed properly if you have one on your chain.




Warning: Do not use an O-ring chain as there is not enough clearance for one and it would rub the frame.

- Reinstall chain and top sprocket.
- Adjust chain tensioner using a 4mm Allen wrench and by sliding the tensioner up the sidebar until the front side of the chain has roughly 10-15mm (0.4-0.6in) of give when pressure is applied.
- Replace sidebar cover. Torque sidebar cover bolts to 8 ft-lb.

Note: If cover does not seat on the sidebar, the top sprocket is not fully seated in the bearing




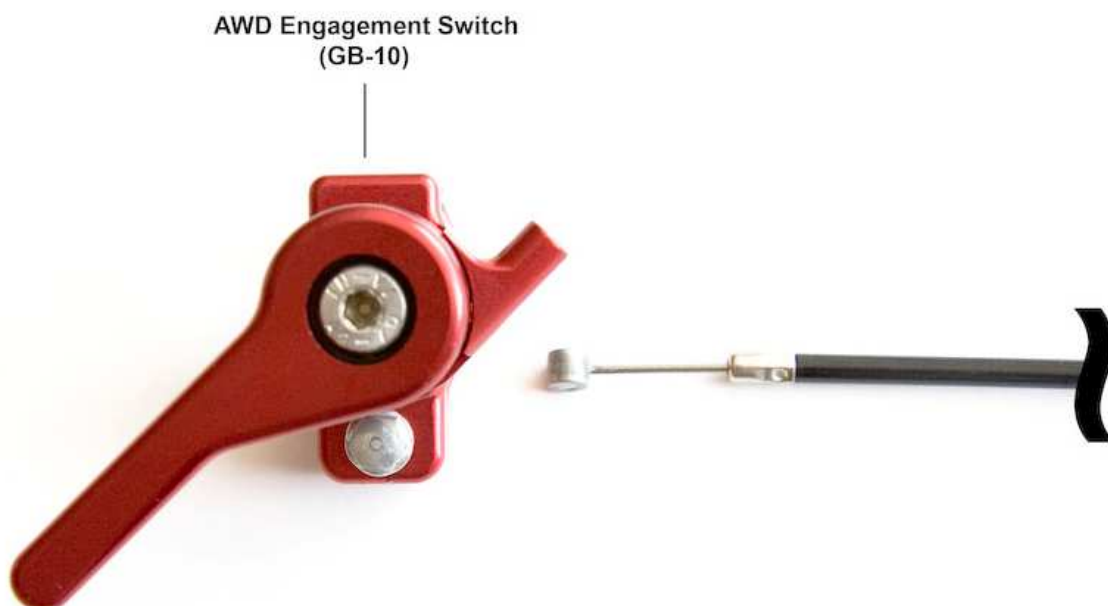


- Grease engagement retaining washer.



- Insert washer into the back of the gearbox using a pick so it sits flush against the input gear retaining ring.

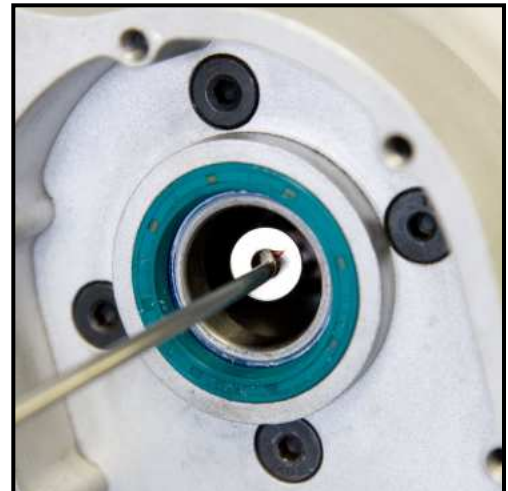


- Insert the small fitting from the engagement cable through the center hole in the back of the gearbox and feed it through until it sticks out the front of the sidebar.

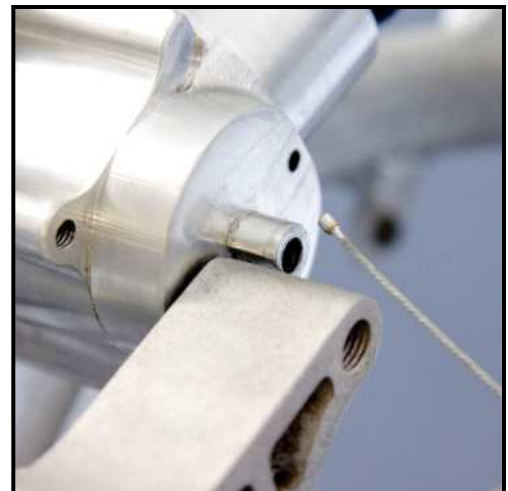


AWD Engagement Installation



- Grease the engagement spring and spline.

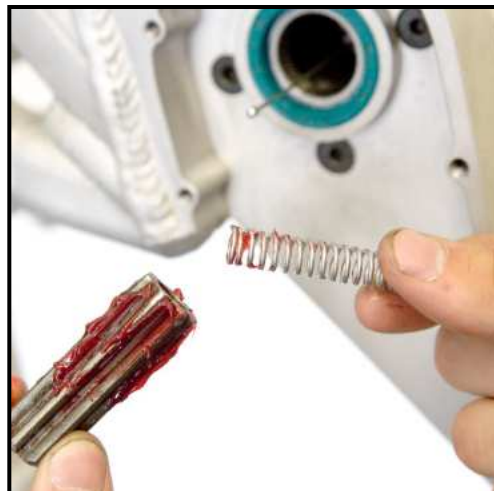

- Feed the engagement cable through the spring and spline.

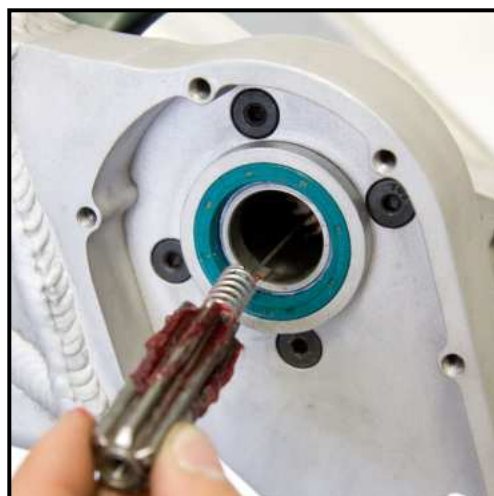


- Insert the cable fitting onto the end of the cable and seat the fitting into the engagement spline bearing.

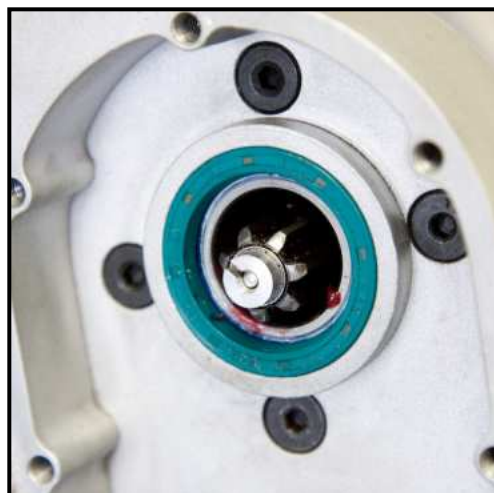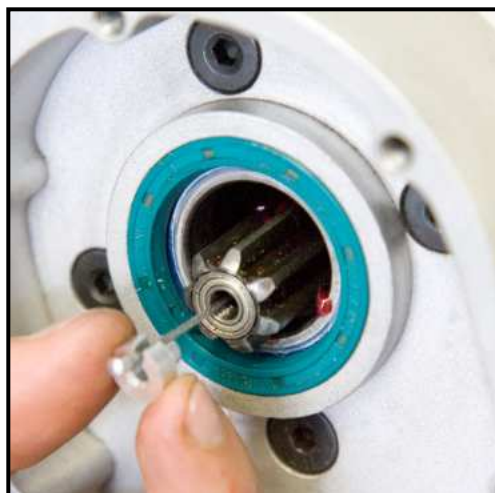

- Seat the cable housing into the back of the gearbox.



- Slide the other end of the cable into the engagement switch.

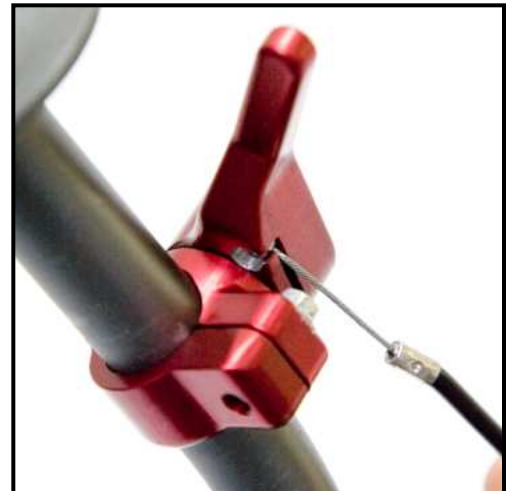

- Line up the engagement spline with the input gear inside the gearbox and push the spline into the gear.



AWD Engagement Installation

- Position the switch so the lever is positioned towards the rider (on) and slide the housing into the end of the switch.

Note: If there is not enough slack to seat the cable, make sure the engagement spline is pushed all the way into the gearbox and the barrel adjuster on the cable is turned in completely.



- Insert the secondary sprocket into the sidebar and make sure it is fully seated.



- Position the engagement lever towards the rider (on) and turn the barrel adjuster out until the engagement spline just starts to pull away from the stop snap ring.



- Push the lever to the off position. Make sure the secondary sprocket is fully seated. Spin the secondary sprocket to verify that the spline has fully disengaged from the sprocket and it spins freely.

Note: Due to AWD hub design, front wheel removal and installation is aided by removing front caliper first.

- Remove front brake caliper (note: do not squeeze front brake lever while caliper is off).
- Remove axle bolt from axle.



- Loosen axle pinch bolts on both sides of dropout.



- Slide axle through wheel and remove.




- Remove front wheel from dropouts.

Note: The hub inserts will not fall out like the spacers on a normal hub. They will also rotate independent of each other; this is ok.



Front Wheel Installation


- Lightly grease dropout o-rings and hub seals before installing the front wheel.
- With brake caliper removed, install front wheel into forks by carefully aligning right drive carrier on dropouts with hub inserts. Once the right carriers are seated, slide axle through to other end of hub.
- Carefully align left carriers and slide axle completely through to the other side. Note, a flat blade screw may be needed to align hub insert with drive carrier. Note that the hub inserts will only rotate in one direction in the hub.

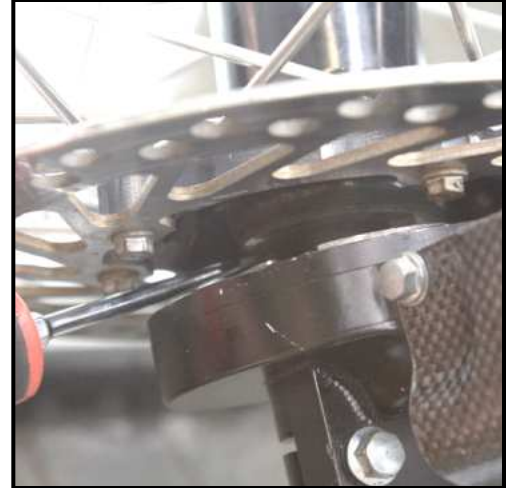

- Thread axle bolt back into the end of axle and tighten to 12ft-lb. Tighten axle pinch bolts to 12 ft-lb. **Note:** If wheel does not spin freely, axle bolt is too tight!



- Reinstall front brake caliper.

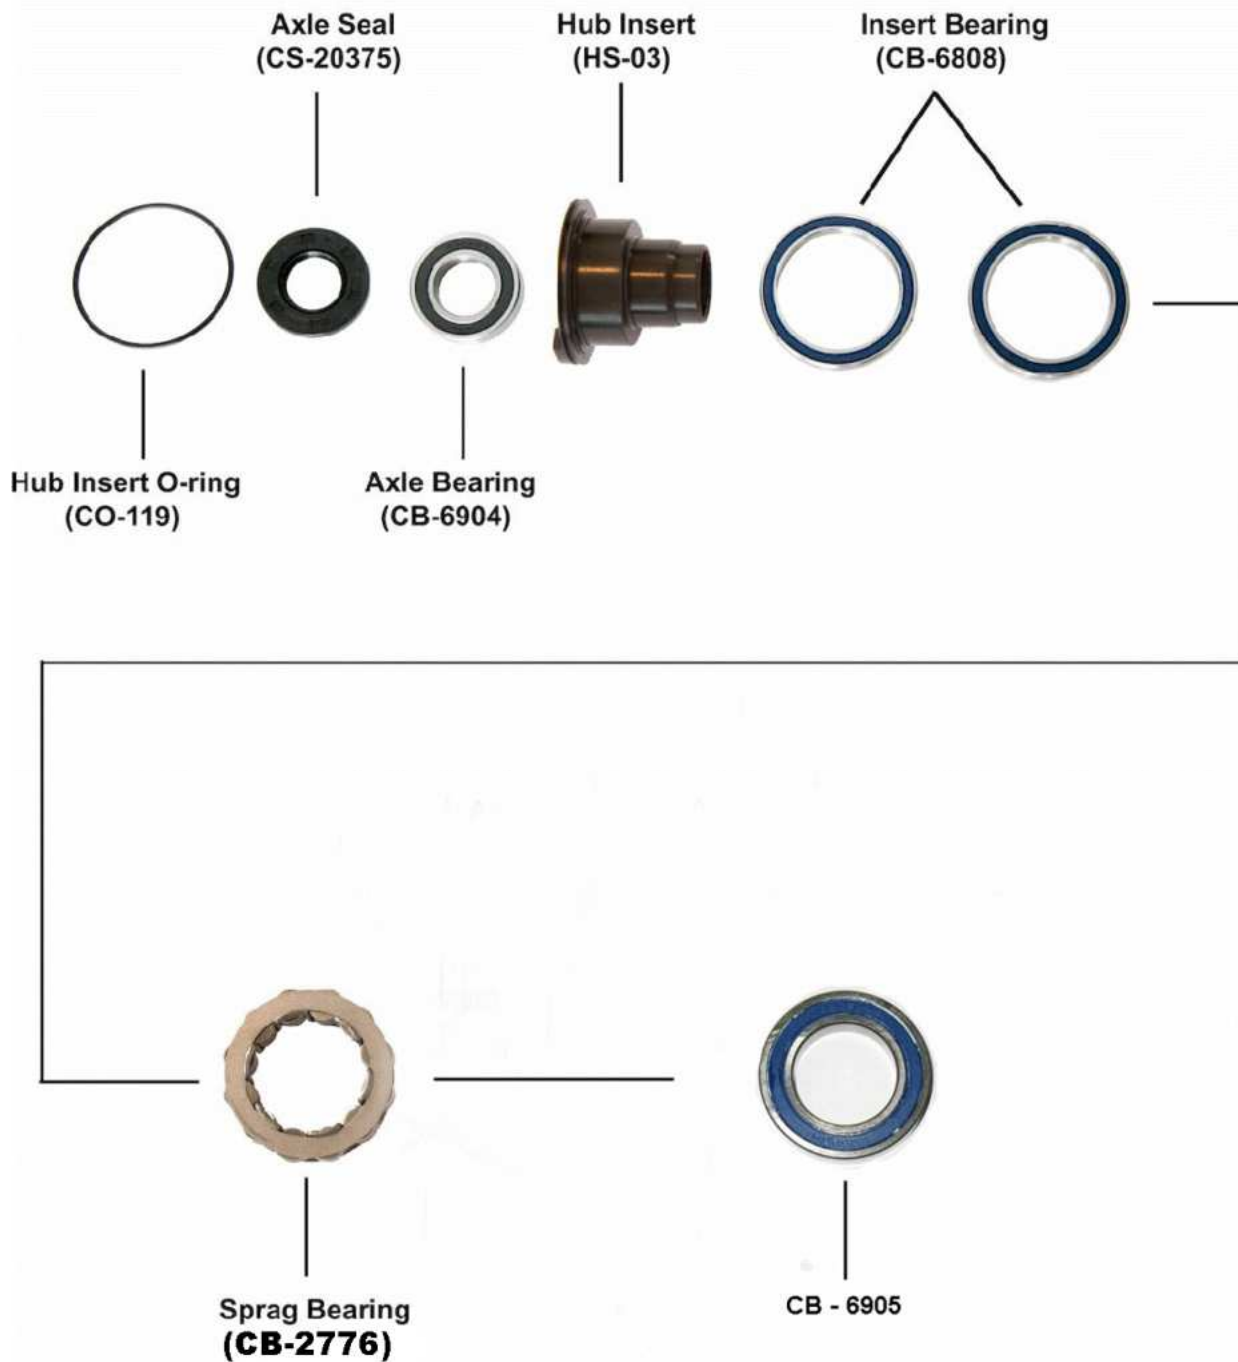

Orientation is different for each side of hub
see following pages

Front Wheel Service

Warning: Before taking hub apart, make sure that you have a full set of spare sprag bearings. Sprag bearings are likely to be damaged during the disassembly process and new ones may be required.

- Using a soft punch, remove the hub inserts from either side of the hub.



- Pry the insert seals out of the inserts using a flat bladed screwdriver.



- Remove the hub insert o-rings with a pick.



- Punch the axle bearings out of the inserts using the access holes in the back of the inserts.



- Using a bearing punch, install the axle bearings into the hub inserts.



- Press the axle seals into the hub inserts.



- Install the hub insert o-rings.



Warning: Sprag bearings must be installed in the correct orientation in the hub for the AWD system to work properly. If the sprag bearings are not installed correctly, the AWD system can be damaged.


- Press CB-6905 bearing into the Hub Inner Race



- Be sure that the bearing is seated completely



- Insert sprag bearing into hub shell. (correct direction will be determined in next steps.). Lightly grease inside of sprag bearing with Shell grease.

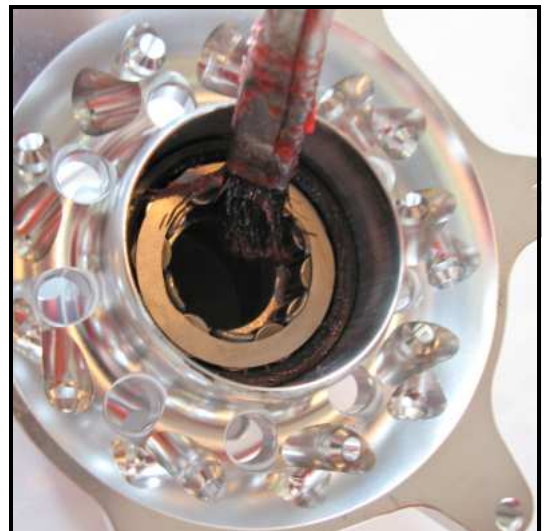

- Test fit hub insert into hub, twisting as it is inserted.



- Spin the hub insert and check to make sure it is free-wheeling in the correct direction. If it is not, remove the hub insert and flip the sprag bearing around. Recheck to verify that hub insert freewheels in the correct direction before moving on to next step.



- Remove hub insert and press insert bearings into hub.



- Grease hub insert seal, and slip hub insert into hub. It may be required to tap hub insert into hub with a soft faced hammer.



-
- Grease axle seal.



- Repeat procedure for the other side of hub.

Fork Removal

Warning: If removing forks for rebuild service, the fork dropouts must be disassembled so that the drive system parts are not contaminated during the service.

- Loosen the housing cap from the linear bearing housing and unscrew it completely



- Slide the housing down off the sprocket driveshaft



- Loosen top and bottom triple clamp bolts. Be sure to hold fork while loosening bolts so it does not fall out. Slide fork out of triple clamps and remove.

Warning—When fork is off the bike do not apply side pressure to spline shafts as it is possible to bend them if enough force is applied.

- Carefully slide forks into triple clamps.
- If Honda 2004 or earlier forks are used, make sure they are at or above the scribe line when inserted into the upper triple clamps. Running the forks lower in the triple clamps may damage the linear spline bearings.
- Set desired fork height and torque triple clamp bolts to the following:

15 ft-lbs Lower

17ft-lbs Upper



- Slide the linear bearing housing over the drive sprocket shaft




- Tighten the housing cap down with 2 adjustable wrenches



•

Dropout Disassembly

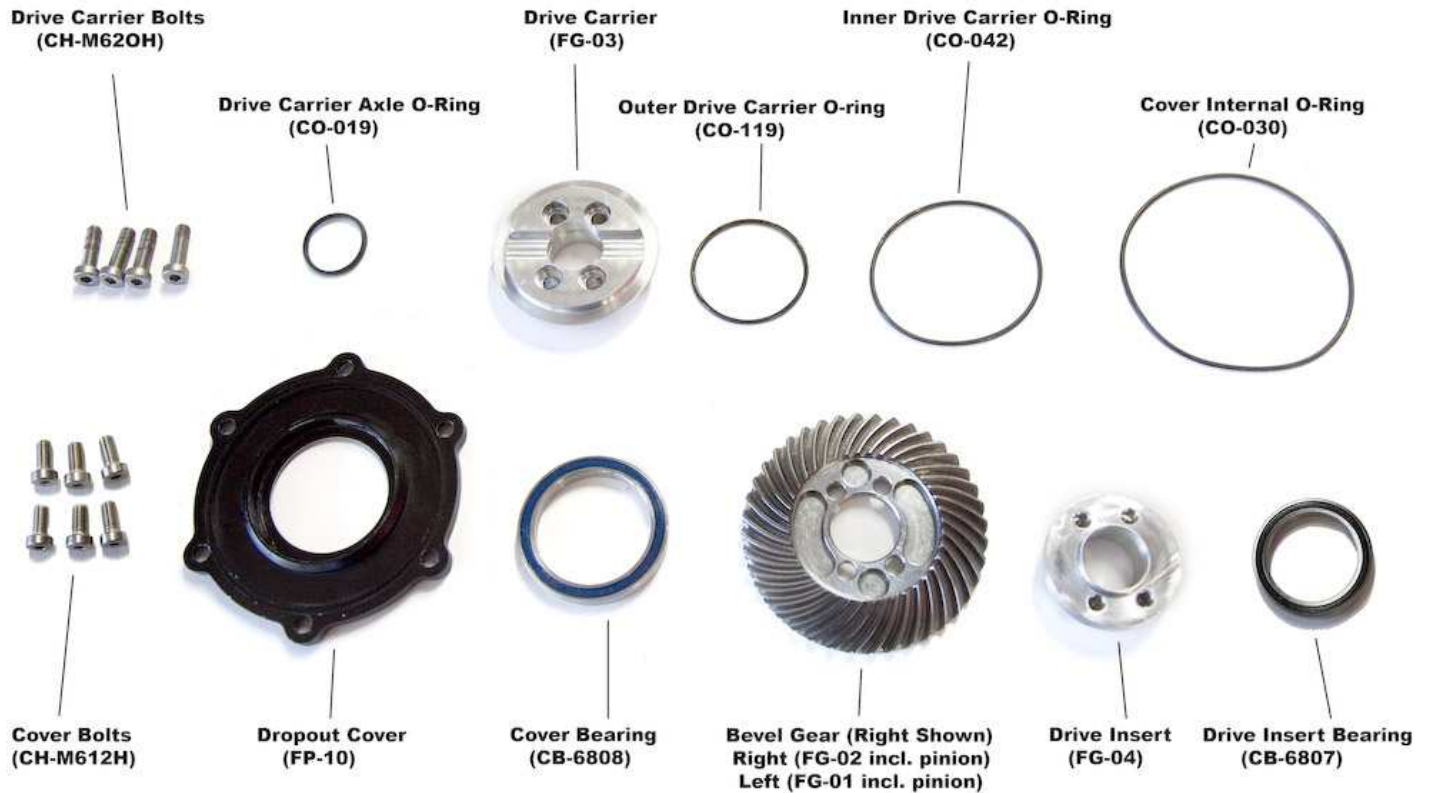

Pinion Gear (Right Shown)
Right (FG-02 incl. Bevel Gear)
Left (FG-01 incl. Bevel Gear)

Lower Pinion Bearing *
(CB-7001)

Top Pinion Bearing
(CB-6901)

Pinion Shaft Seal
(CS-17265)



* Angular contact bearing
* Black seal must face towards pinion gear!

Dropout Disassembly

- Remove the front wheel and front fork.
- Remove bellow clamp and bellow from spline driveshaft. Pry gently with small flathead screw driver to undo clasp on clamp. The clamps are not reusable!



- Remove set screw from driveshaft with 2.5mm Allen key.



- Remove driveshaft from pinion gear by lightly tapping lower driveshaft with a plastic hammer while pulling the driveshaft away from the dropout.



- Remove 6 cover bolts on the outside of the gearbox using a 4mm Allen wrench.



- Rotate the cover and pull it off of the dropout.



Dropout Disassembly

- Remove drive insert bearing from inside of dropout. Bearing is a slip fit so only light pressure from screw driver is required to remove.



- Tap down on pinion gear with plastic face hammer. After pinion is removed, slide the bottom bearing out of dropout bore. If bearing stays on pinion shaft, remove by hand or with split bearing puller. Note: lower pinion bearing is angular contact so if pressure is applied in the wrong direction it may come apart. If bearing comes apart, it must be replaced.



- Remove top driveshaft seal from dropout using small flat blade screwdriver. Be careful not to scratch inner bore.



- Remove top pinion bearings from upper bore by tapping them lightly tapping from inside the dropout with non-marring punch.



- Pry axle o-ring from dropout using small pick.



- Remove 4 drive carrier bolts with 4mm Allen wrench. The inner hardened bevel gear can be clamped with soft jaws in a vise or the drive carrier can be held with square bar stock to keep the assembly from moving as you unscrew the bolts.



- Lightly tap the outside face of drive carrier with plastic hammer to break it free from gear and drive insert.



- Remove axle o-ring from drive carrier with pick.



- Remove cover o-rings and drive carrier o-ring.



Dropout Disassembly

- Remove cover bearing with bearing removal punch. Note o-ring lip near inner race of bearing is easily damaged. Only apply pressure to inner race of bearing.



- Remove drive insert from gear with hammer and bearing removal tool.



- Before reassembly of dropouts, all parts must be cleaned and inspected individually for damage or wear. Parts can be cleaned with solution no different than OEM fork. Be sure to blow dry dropouts and parts prior to reassembly if cleaning solution is used.
- Pinion and bevel gear must be replaced as a set.
- If bearings are seized or hard to turn by hand they must be replaced or cleaned and repacked with grease.
- Be sure to grease all o-rings and gears during reassembly.

- Drive cover bearing into cover with bearing installation tools and install inner and outer cover O-rings. **Note:** all O-rings should be lightly coated with grease before being reassembled.



- Insert drive carrier o-ring on drive carrier and insert drive carrier into cover and tap into place. **Note:** face of drive carrier should be flush with cover bearing and machined cover surface.



- Place drive insert on tooth side of bevel gear and line up all four threaded holes with clearance holes on gear.



- Set cover and drive carrier on top of bevel gear assembly, with smooth side of gear facing the cover. Line up 4 bolt holes and thread drive carrier bolts into drive insert. Blue Loctite should be used on bolts. Final tightening of bolts will require a square bar or soft jaws to keep gear from spinning. Torque bolts to 8ft ft-lbs.
- Check that bevel gear spins freely on cover. If it does not spin freely, check to make sure all o-rings and the cover bearing are properly seated. If new o-rings are used, there may be more friction until o-rings seat and break in.
- Insert axle o-ring into drive carrier.



Dropout Assembly

Warning: Bevel gears are right and left hand specific and must be installed in the correct dropout or damage to the system can occur. The Left Bevel Gear Set shown below must go in the disk side dropout. Note the difference in the spiral direction on each gear set.



Note: Be sure dropout is clean before proceeding

- Insert top pinion bearings and seal into driveshaft bore at top of dropout using bearing driver. Note, be careful not to damage seal or nick chrome fork plating with hammer. Use plastic faced hammer.
- Apply light grease to pinion seal



- Insert bottom pinion bearing onto pinion gear.

WARNING: black seal must be facing down towards gear teeth. If bearing is not inserted correctly, severe damage can occur!



- Slide bearing and pinion gear into bore. Make sure bearing is fully seated.



Dropout Assembly


- If needed use hammer and soft punch to tap end of pinion gear to seat bearing.



- Insert axle o-ring into dropout.



- Install drive insert bearing and wedge small flat blade screwdriver in between pinion gear and inner bearing to keep pinion gear in place when the splined shaft is installed.

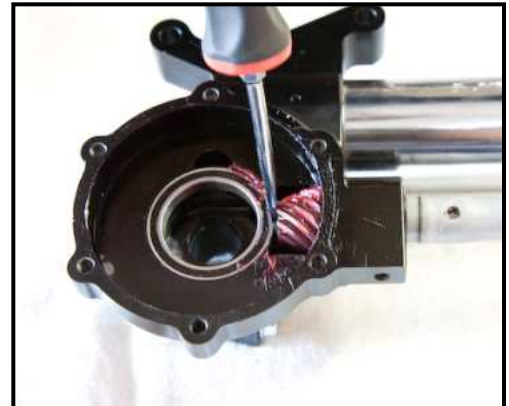

- Slide splined driveshaft onto pinion gear, making sure to line up the set screw holes. Lightly tap end of spline shaft with plastic faced hammer to slide it down onto pinion gear and line up set screw holes.



Dropout Assembly

- Insert set screw with light dab of blue Loctite. When set screw is fully seated, it will be slightly below the surface of driveshaft. If not, make sure that spline shaft is fully seated on pinion gear.



- Grease pinion gear and bevel gear with Shell Lithium grease.
- Insert cover/bevel gear assembly onto dropout.
- Insert 6 cover bolts and tighten in a cross star pattern using a 4mm Allen wrench. Tighten to 8ft-lbs.
- Check that drive carrier spins freely and wipe excess grease from outside of dropout.



- Reinsert bellow and bellow clamp over spline shaft and crimp bellow down using crimping tool or vise grips.



WARNING: The band of clamp must be over the set screw to ensure that the set screw can not back out.


- Lightly grease spline shaft with Shell Lithium grease.
- Reinsert forks into triple clamps.





Fork Spline Bearing Service

- Cut Safety wire from boot and slide it off the housing.
- Remove forks from triple clamps (see page 25).
- Slide housing assembly off of linear driveshaft.

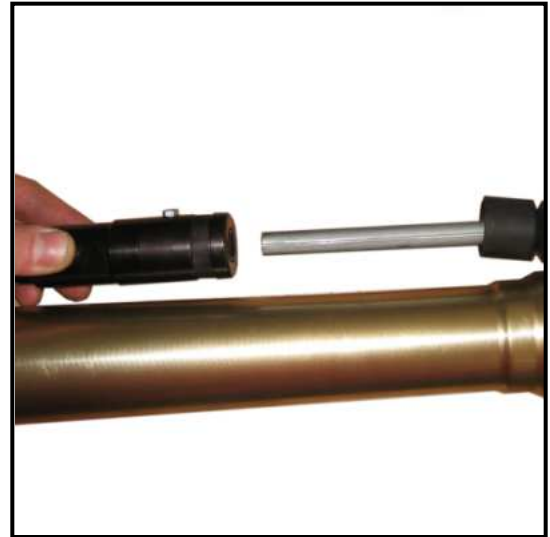

- Unscrew grease port from linear bearing housing.



- Slide housing sleeve off of housing.



- Remove linear bearing retaining ring.



Fork Spline Bearing Service

- Slide linear bearing out of housing and inspect. If ball bearings inside of the case are corroded or worn, replace linear bearing.

Warning: Do not use hammer and punch to remove bearing as it may damage the bearing. If bearing will not slide out apply pressure to the bearing lip with an 8mm nut driver to remove it.



- If shaft seal is damaged or worn, pry it out and replace it with a new seal.



- Remove felt from housing sleeve and inspect. If needed, replace felt.

Note: Dirt will pack up in felt. The felt can be cleaned and reused.



- Saturate felt with gear oil and place it back in housing sleeve.
- Reassembly of linear bearing housing is the reverse of disassembly.



Warning: Use red Loctite on grease fitting or it may back out and cause the housing sleeve to slide down while riding.

Warning: When sliding linear bearing housing back onto driveshaft, carefully align the ball bearings with the grooves in the driveshaft. Do not force the housing onto the driveshaft. Groove should be approximately 90 degrees to the grease fitting.



Boot Replacement

Note: To remove and replace the drive shaft boots, it is not necessary to remove the forks. The service can be done by removing the fork guards and following the instructions below.

- Remove Fork Guard



- Remove Boot Clip with wire cutters



- Pull up boot and loosen Drive shaft set screw



- Insert screw drive in vent holes and tap screwdriver.



- The shaft will slide upwards
- Remove Old boot and replace with a new boot.



- Be sure to add the clip on the bottom of the shaft
- Reinstall the drive shaft and tighten set screw
- Slide boot back over the bottom shaft and set screw.



- Crimp the clamp around the boot and set screw and reinstall the fork guard



Triple Clamp Removal

Note: To service the triple clamp chains, sprockets and bearings it is recommended that you leave the bottom triple clamp attached to the bike. This will make it easier to pull the cover off. For servicing the steerer tube bearings, or replacing the head tube gears, the triple clamps will need to be removed.

- Remove forks and front fender from triple clamps.

- Loosen the two preload bar pinch bolts.



- Remove the preload bolts with a 22mm Wrench.



- With a plastic faced hammer, tap the bottom triple clamp to unseat it from the frame.



- Slide the bottom triple clamp out of the frame.





- Pull the top triple clamp assembly out of the frame.

Note: It may be necessary to tap the underside of the top triple clamp with a plastic faced hammer to unseat it from the frame.



Triple Clamp Service

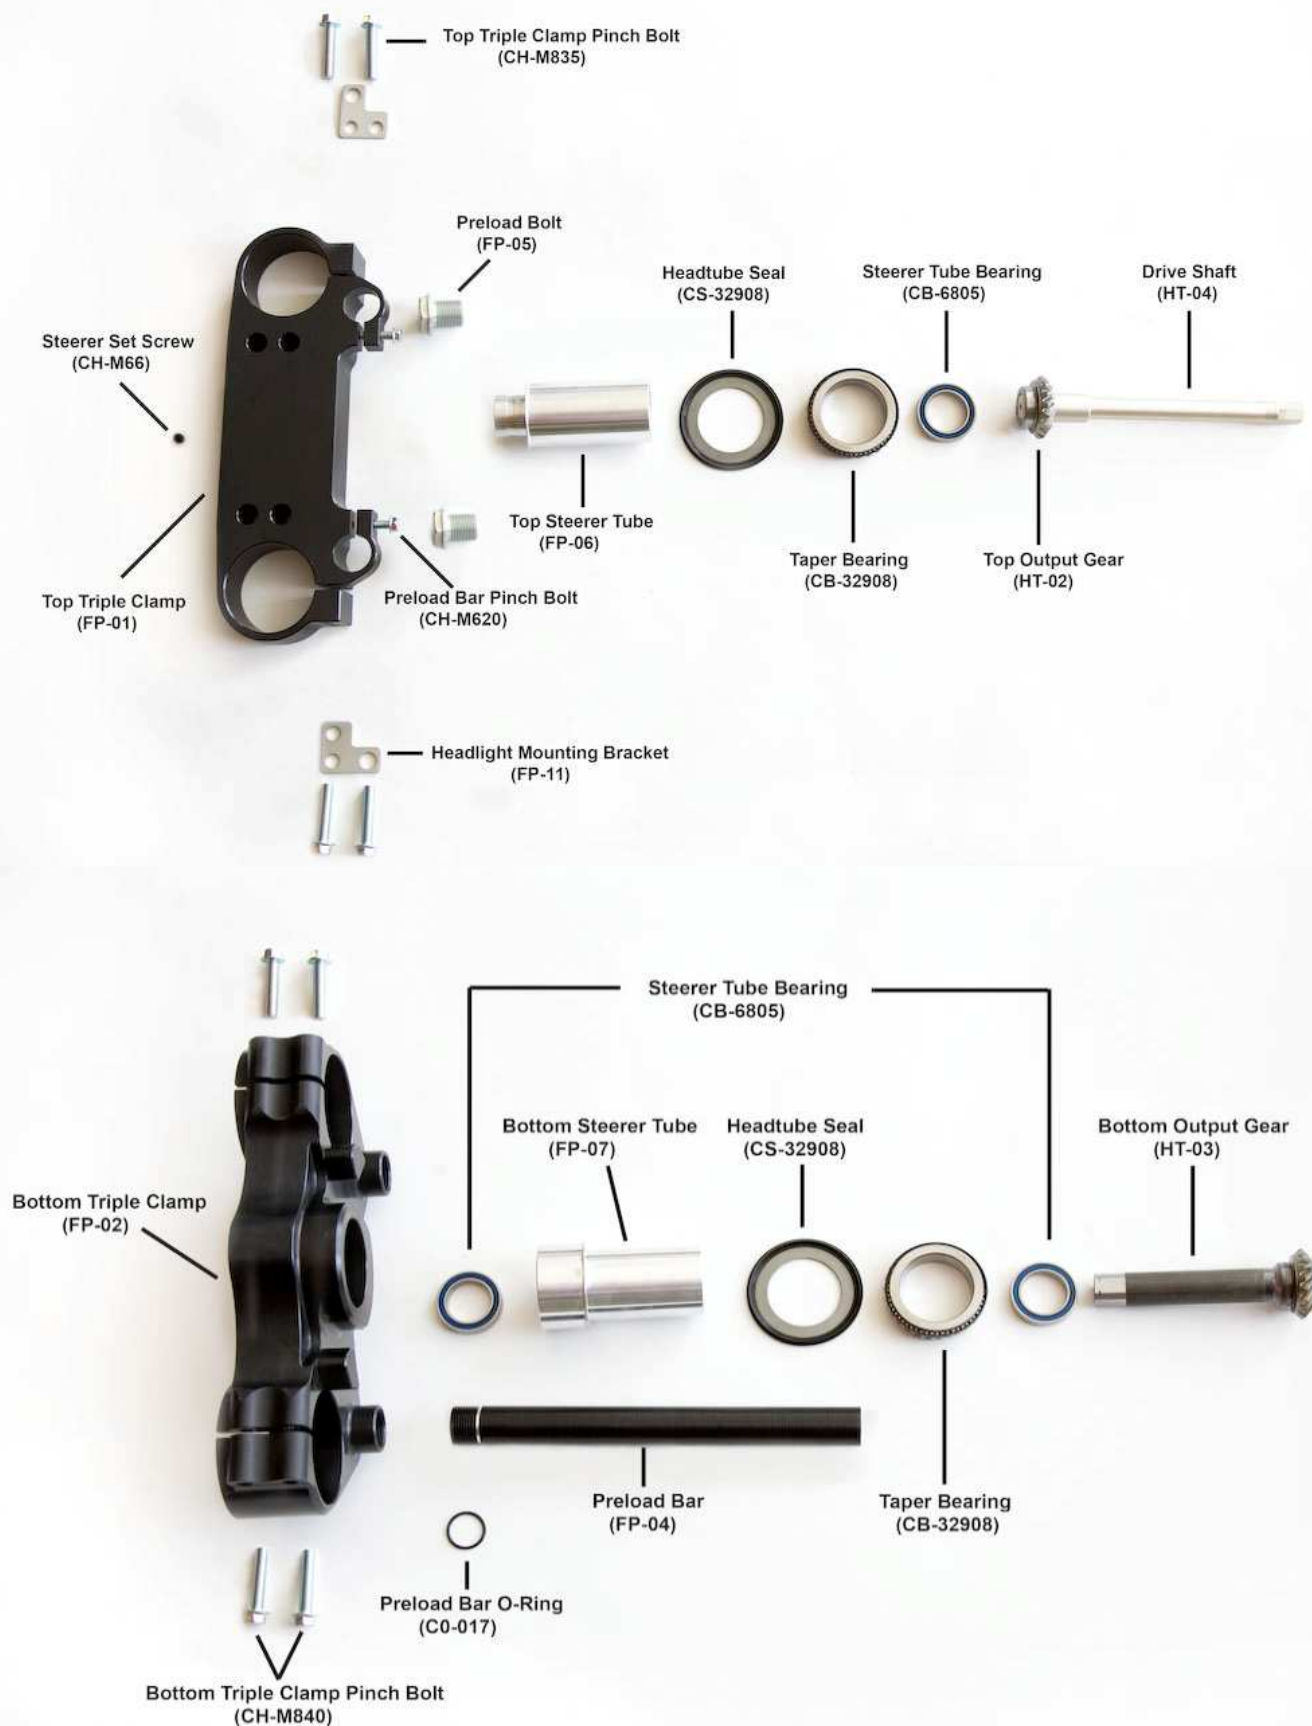


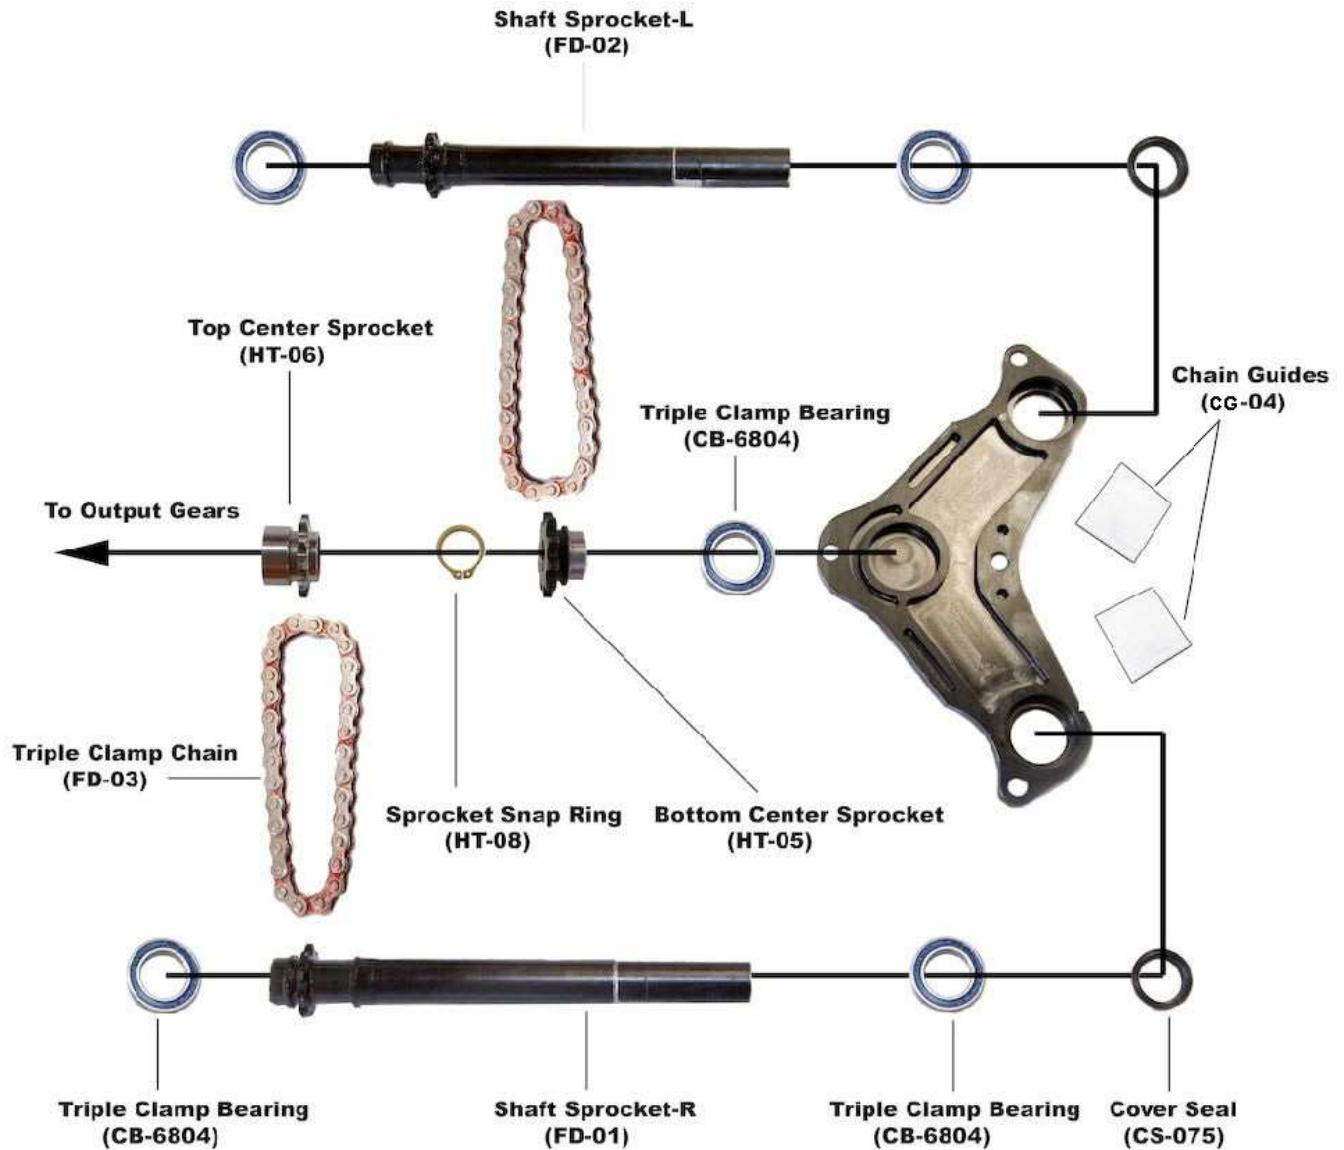


Bottom Triple Clamp Disassembly

Note: To service the triple clamp chains, sprockets and bearings it is recommended that you leave the bottom triple clamp attached to the bike. This will make it easier to pull the cover off. For servicing the steerer tube bearings, or replacing the head tube gears, the triple clamps will need to be removed. For picture clarity, the triple clamp was removed from the bike.

- Remove the forks and spline bearing assembly.
- Remove the 4 cover bolts from the bottom of the triple clamp with a 6mm Allen wrench.
- Carefully pull on the shaft sprockets and ease the cover down from the bottom triple clamp. The Left shaft will pull down with the cover. The right shaft will stay in place and the cover will slide down over it.

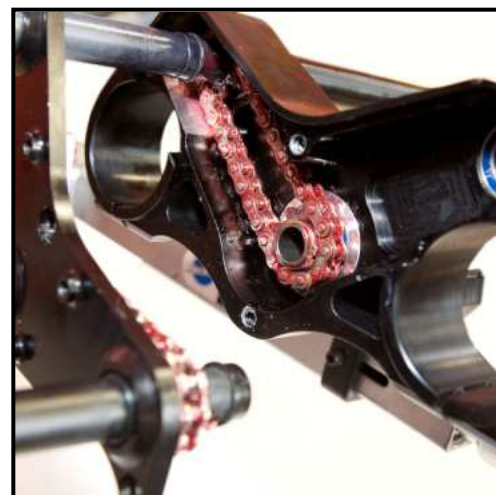

- Remove the right shaft sprocket and the chain inside of triple clamp cavity.

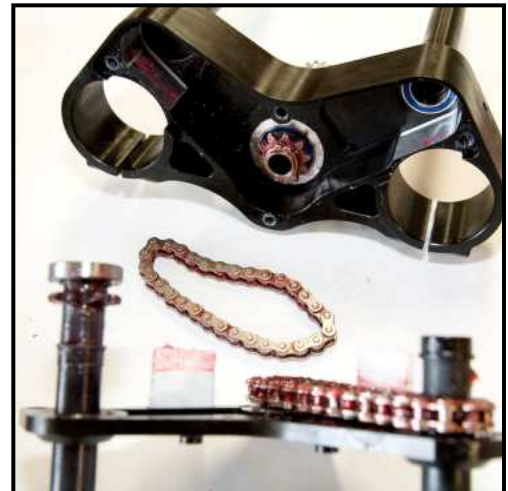

- Pull center bottom sprocket off of the cover and remove the chain.



- Pull both shaft sprockets out of cover. Be careful of seal as it slides over snap ring grooves as it can tear the seal.



Bottom Triple Clamp Disassembly

- Remove cover bearings from cover with bearing puller if they need to be replaced.



- Remove cover seals and inspect. Replace if needed.



- Remove sprocket snap ring .



- Remove sprocket and gear by tapping the gear through the sprocket with a plastic faced hammer and pulling it out the top of the steerer tube.



- Remove gear from steerer tube. If bearing comes out with gear, remove bearing from gear with split bearing puller if it does not slide off easily.



- If top bearing remains in steerer use a punch to remove it.

Bottom Triple Clamp Disassembly

- Tap the bottom output bearing from the bottom steerer tube.



- Inspect gears and bearing and replace any parts if needed.

Note: Head tube gears must be replaced in sets.



Warning: Replacing the taper bearing is a job for your dealer. Do not attempt to do this on your own.

- Remove the preload bars from the bottom triple clamp.
- Press the steerer tube out of the bottom triple clamp with an arbor or hydraulic press. The steering stops should be supporting the triple clamp as the steerer is pressed out.
- Press the taper bearing and seal off of steerer tube with an aluminum sleeve available from Christini.
- Press new taper bearing and seal onto steerer tube.
- Coat mating surface of triple clamp and steerer tube with green Loctite.
- Press steer tube into triple clamp.



Bottom Triple Clamp Assembly

- Press steerer bearing into the top of the steerer tube.



- Press steerer bearing into bottom of the steerer tube.



- Install bottom output gear and tap sprocket back onto bottom of gear using a plastic faced hammer. Sprocket is fully seated when the end of it is flush with the snap ring groove.




- Replace snap ring.



- Install cover seals.



- Press cover bearings back into outer bores of cover.

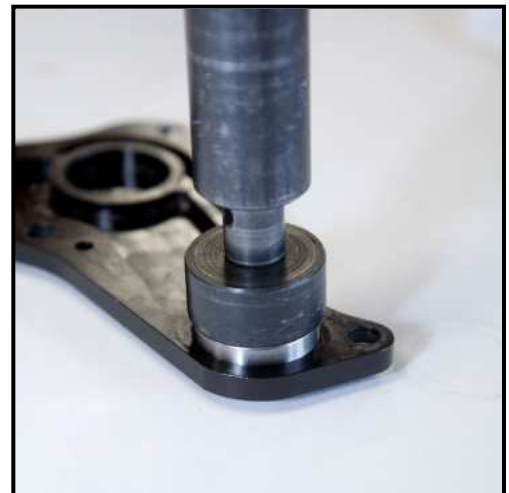

- Insert Teflon chain guides into cover if they were removed. Note the wear pattern and be sure that the guides are placed on the same side as they were removed from.



Bottom Triple Clamp Assembly

- Insert triple clamp bearing onto top of the right shaft sprocket. It will be a slip fit.
- Wrap chain around top center sprocket and right shaft sprocket.
- Insert shaft sprocket and bearing into bearing bore on triple clamp. It will be a slip fit.




- Insert triple clamp bearing onto bottom center sprocket.
- Push left shaft sprocket through cover.
- Wrap the chain around the left shaft sprocket and bottom center sprocket.
- Insert bottom center sprocket with bearing into the center cover hole.
- If needed, grease chains with Shell grease.



- Slide cover and left shaft sprocket up into bottom triple clamp until the cover meets flush the lip of the bottom triple clamp. If needed use a small screwdriver or pick to push the right chain away from the Teflon block as the cover slides into place.

Hint: once the cover makes contact with the bottom triple clamp, rotate the shaft sprockets as you are pushing the cover into its final position. This helps to line everything up correctly.

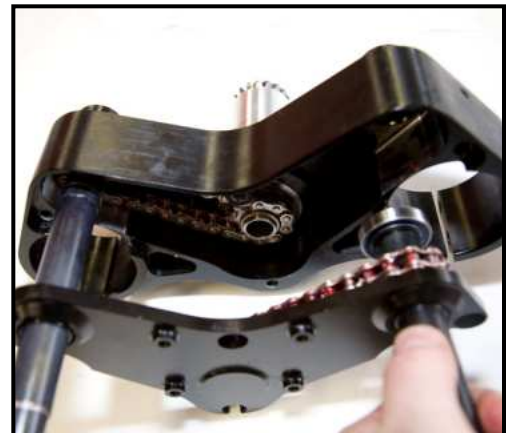

Warning: Left and right shaft sprockets must be installed on the correct side or severe damage to the AWD system can occur. A simple rule to remember is that the lower shaft sprocket goes on the rider's left side (ie: Left=Low).



- When cover is in place screw down the cover bolts with a 6mm Allen wrench.

Note: Use blue Loctite on cover bolts. Torque bolts to 12 ft-lbs



Top Triple Clamp Disassembly

- Pull top output gear and bearing out of top steerer. If bearing does not come out with gear, use blindside bearing puller to remove the bearing



- If bearing is seized or hard to turn by hand, it should be replaced.
- Inspect output gear for wear. If it needs to be replaced, **all gears in the head tube must be replaced at the same time.**



Warning: Replacing the taper bearing is a job for your dealer. Do not attempt to do this on your own.

- Loosen steerer set screw in triple clamp and remove the steerer tube.



- Press taper bearing and seal off of steerer tube with an arbor or hydraulic press.

Note: A new seal will be needed as it will be damaged when the taper bearing is pressed off the steerer.



- Press new taper bearing and seal onto steerer tube.



- Insert steerer tube into top triple clamp and tighten set screw to secure steerer tube.

Top Triple Clamp Assembly


- Slide the steerer tube bearing back onto the output gear.



- Press gear and bearing into top steerer tube.



- Remove the head tube cover from the front of the head tube.

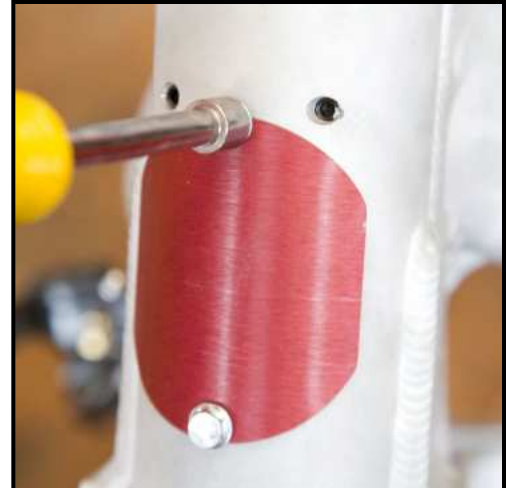



- Slide the input head tube gear and main driveshaft out the head tube access port. The driveshaft will need to slide out of the clutch hub.



- If the 3 input bearings do not come out with the input gear, gently tap them out with a punch. Make sure they do not get cocked as they are being tapped out.

Warning: If any of the head tube gears are damaged and need to be replaced, all of the head tube gears must be replaced together as a set.

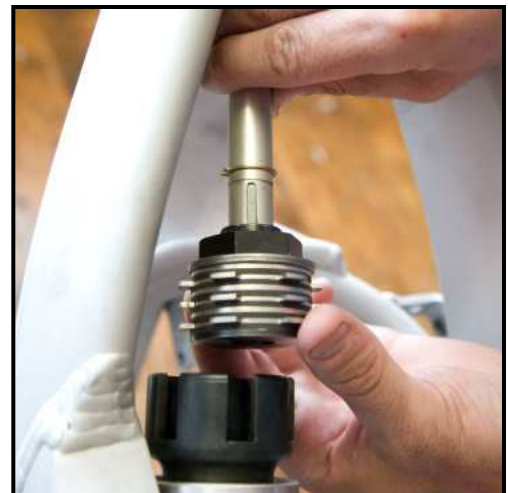

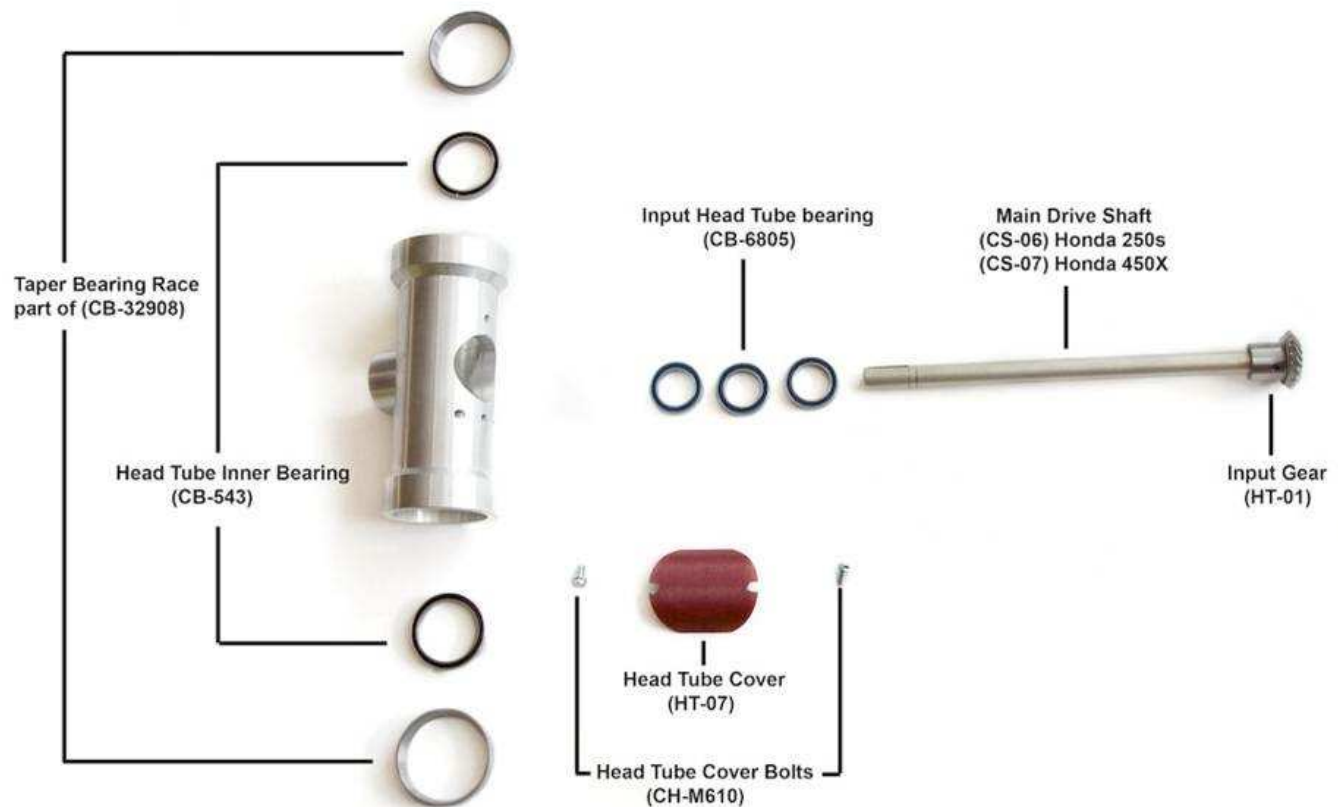

* Picture above shows a head tube not welded to the frame for reference.

- Use a punch and remove the inner B543 bearings.



- If the taper bearing races are corroded or pitted, remove them with a punch.

- Clean the headset bearing surfaces with degreaser and apply a few drops of green Loctite.

- Install the inner B543 bearings using a bearing punch.

- Install the taper bearing races using a bearing punch.




Main Drive Shaft Service

- Slide the input bearings onto the head tube gear.



- Slide the driveshaft partially through the frame and install the clutch hub. **Be sure the clutch retaining snap ring is on the driveshaft before sliding the clutch hub onto the driveshaft.**

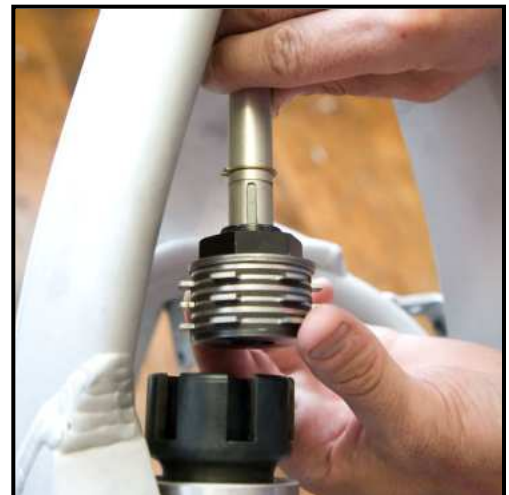

- Slide the driveshaft the rest of the way through the frame, seating the input bearings and gear in the head tube and the clutch hub with the clutch basket. Use a soft punch and lightly tap the gear to be sure it is fully seated.
- Move the clutch retaining snap ring into the groove closest to the clutch hub.



Triple Clamp Installation

- Grease the top and bottom taper bearings with Spectro SPL or equivalent waterproof grease. Grease output gears with Shell grease.
- Check to make sure input head tube gear and bearings are completely seated in the back of the head tube.



- Slide top triple clamp assembly into the head tube.
- Before seating the top triple clamp assembly, make sure the output gear and input gear are beginning to mesh correctly.

Note: If the two gears are not meshing, it will not be possible to seat the top triple clamp correctly.



- Tap the top triple clamp with a plastic faced hammer to seat it completely.



Triple Clamp Installation

Slide the bottom triple clamp partway into the head tube as you do the following:



- Align the preload bars so they begin to slide into the top triple clamp.



- Make sure the bottom output gear and input gear are meshing correctly.



Triple Clamp Installation

- Finally, spin the left side sprocket driveshaft to align the bottom center sprocket (located inside the cavity) with the steerer driveshaft. Once turning the sprocket driveshaft also turns the top output gear, everything is aligned correctly.



- Tap the bottom triple clamp with a plastic faced hammer to completely seat it in the frame.



- Screw the preload bolts down until they are flush with the top triple clamp.



Triple Clamp Installation

- Turn the preload bolts evenly until there is no play in the headset (usually 1/2-3/4 of a turn).



- Tighten the preload bar pinch bolts.



- Remove sidebar cover, chain and sprocket from frame (see page 9).
- Remove cable and engagement spline from gearbox (see page 11).
- Slide clutch retaining snap ring up main drive shaft 6 inches or more.



- Slide clutch hub assembly up main driveshaft unit it clears the clutch basket.



- Remove 4 shoulder bolts from sidebar with 4mm Allen wrench.
- With Shoulder bolts removed, slide gearbox out of frame.



Gear Box Disassembly

Output Snap Ring
(CSR-47B)



Output Seal *
(CS-37474)



* Seal Orientation:



Output Retaining Ring
(CSR-30S)



Output Bearings
(CB-6906)



Output Gear
(GB-03)



Gear Box
(GB-01)



Input Bearing
(CB-6905)



Input Gear Snap Ring
(CSR-14B)



Input Gear
(GB-02)



Gear Box Disassembly

- Slide clutch basket off output gear.



- Remove output seals from gear box.



- Remove output snap ring.



Gear Box Disassembly

- Slide output gear and bearings out of gearbox.




- Remove input gear and bearing from gearbox by tapping them out through the access holes in the back of the gearbox.



Gear Box Disassembly

- Remove output retaining ring.

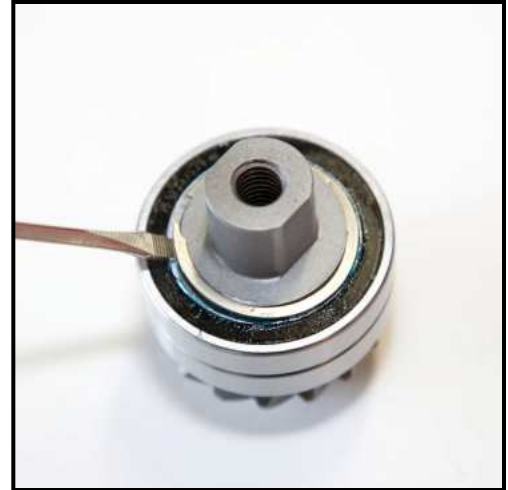

- Use split bearing puller to press output bearings partially off of the gear. After the bearings move away from the gear, use press to remove bearings completely.




- Use same steps to remove input bearing from input gear.
- Inspect gears and bearings and replace if needed.
- Carefully press new output bearings onto driven gear and replace retaining ring.
- Carefully press input bearing onto drive gear and replace engagement spline snap ring if it was removed.



Gearbox Assembly

Note: Make sure engagement spline snap ring is install on input gear before it is pressed into the gearbox

- Press input bearing onto gear and insert gear and bearing into gearbox.

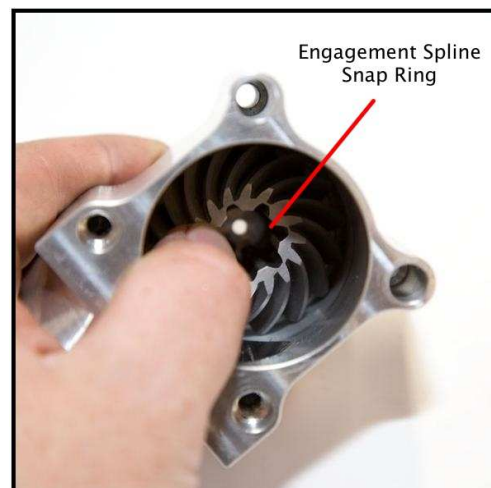

- An aluminum punch and hammer may be needed to gently tap input bearing and drive gear back into place. Make sure bearing is fully seated at the back of the gearbox.




- Insert output gear and bearings into gearbox. Make sure gears mesh correctly as you are pushing the output gear into place.
- Reinstall output snap ring.
- Grease input and output gears using Shell Lithium grease.
- Install output seals into gearbox making sure seals are installed markings facing out.
- Grease lip of seals and push clutch basket back onto output gear.
- Clean any excess grease off of clutch basket.




- Remove gearbox and clutch basket from frame (see page 68).



- Slide clutch assembly off of main driveshaft and remove.

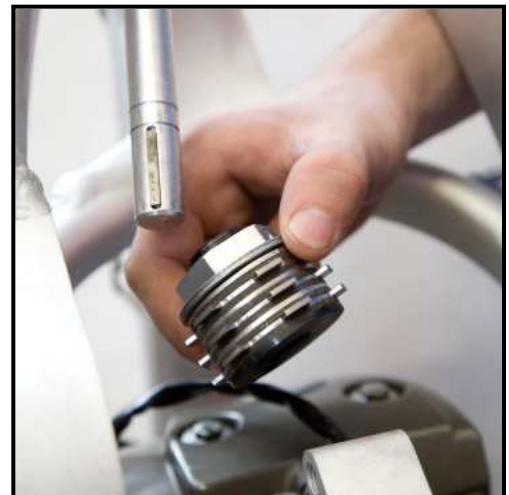


Clutch Disassembly

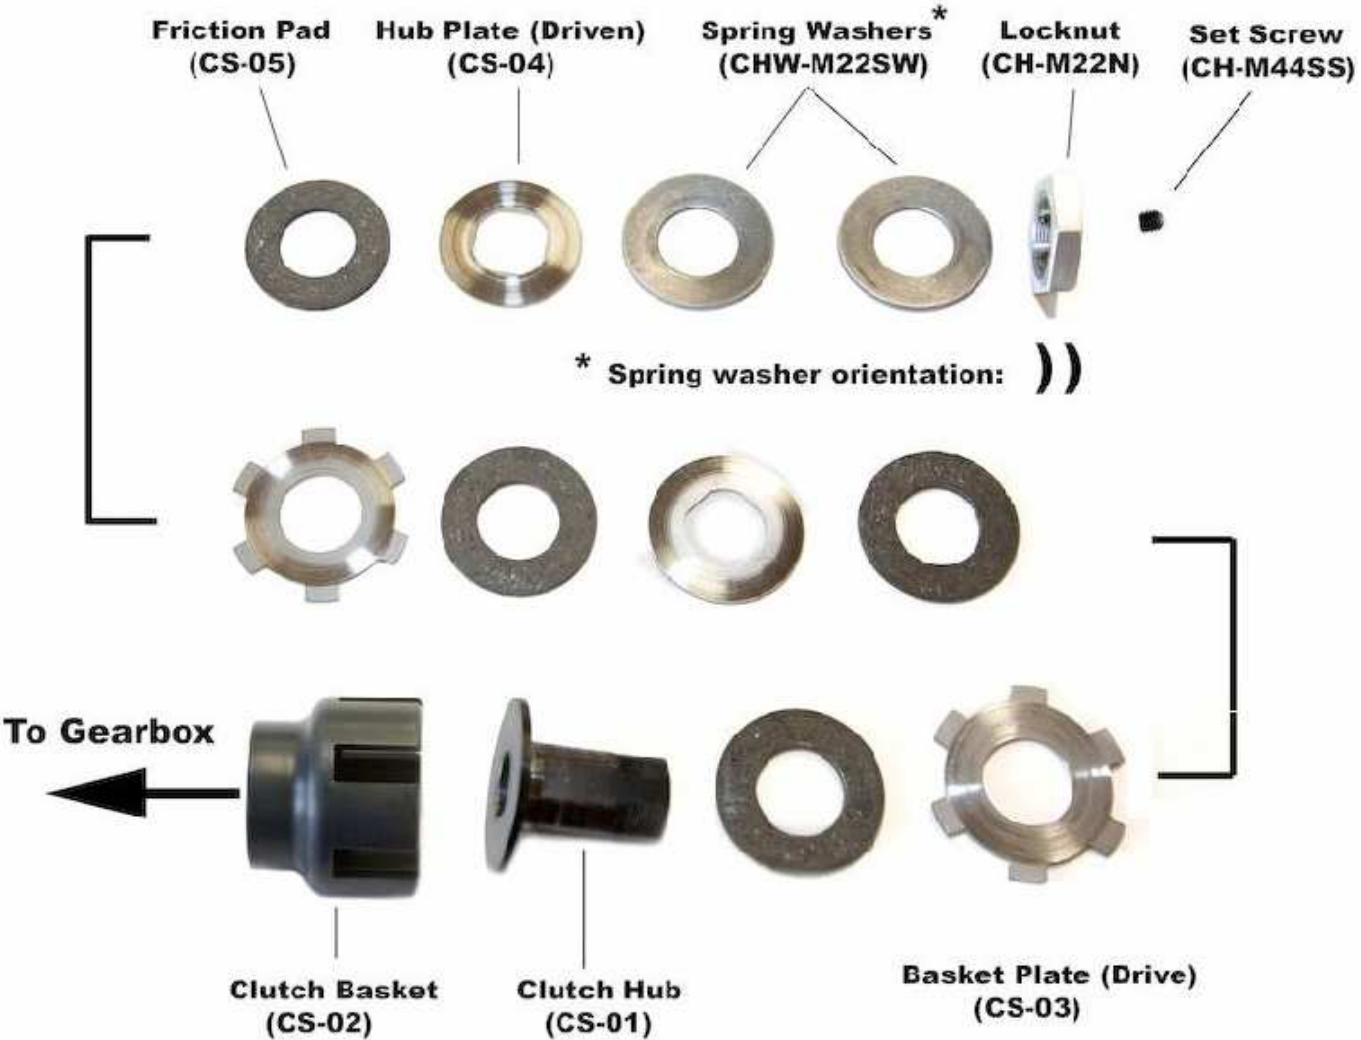

- Loosen locknut set screw so it will not interfere with the hub threads.

Warning: Failure to remove set screw will damage threads in clutch hub.

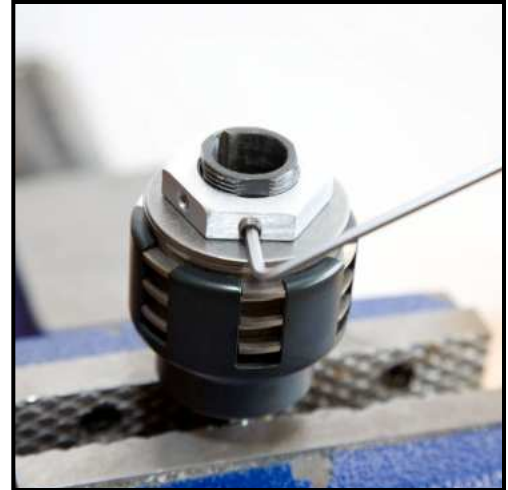

- Remove locknut from clutch hub.



- Remove spring washers, fiber pads and clutch plates and inspect for wear or damage.

Note: If metal plates are not scored or warped, they do not need to be replaced. Simply replace fiber plates during standard rebuilt.



Clutch Assembly

- Reassemble clutch hub noting the order of the plates, fibers and spring washers. Be sure the spring washers are in the correct orientation:



- Use thread file to clean galled hub threads if needed



- Apply anti seize compound to hub thread and thread locknut onto the hub. Tighten until locknut is approximately flush with the hub.



- Reinstall clutch on bike.
- To check clutch settings and adjust as necessary, see page 8)
- Adjust locknut so set screw hole lines up with the nearest flat section on the hub, and tighten set screw.

Warning: Once set screw is tightened, do try to turn locknut as this will damage the hub threads

Problem

Solution

Front forks feel sticky	<ul style="list-style-type: none">• Clean and lube fork seals.• Check to make sure forks are not twisted in triple clamps.• Lube front spline shafts with grease.• If this does not help, pull down dust boot and check spline shaft for damage.• Disassemble spline and check bearing for corrosion and damage.
Front wheel is not pulling	<ul style="list-style-type: none">• Make sure engagement switch is turned on and the engagement spline is functioning properly.• Check clutch setting for proper torque using “wheel check method”.
Drive system is pulling to one side	<ul style="list-style-type: none">• Check sprag bearings in hub to make sure neither side is slipping.• Make sure that drive shafts are free to spin smoothly. Occasionally mud or other debris can hinder one drive-shaft from spinning at the proper rate.
Clutch Basket has notches in it.	<ul style="list-style-type: none">• This is normal. As long as the notches don't exceed 3/16", Replacement is not needed.
Cannot disengage system	<ul style="list-style-type: none">• With bike in neutral rock it back and forth and use the lever to disengage the system.• Engagement cable has too much slack in it. Use barrel adjuster to take slack out of cable.

CHRISTINI AWD LIMITED WARRANTY

This **LIMITED WARRANTY** is a complete and exclusive statement of CHRISTINI's obligations to the **ORIGINAL OWNER** of a **CHRISTINI AWD Motorcycle Kit**.

CHRISTINI Technologies warrants:

-All **Modified frames** to be free from defects in material and workmanship **for a period of ONE (1) year** from the date of purchase for the Original Owner.

-All other original **CHRISTINI AWD components**, including the fork machined parts, front hub, gear box, and the components of the CHRISTINI All Wheel Drive (AWD) system including shafts and drive gears are warranted to be free of defects in material and workmanship **for a period of ONE (1) year** from the date of Purchase for the Original Owner.

OTHER ORIGINAL COMPONENTS

Any components not produced by CHRISTINI, including the front suspension fork internal mechanisms, bear their original manufacturer's own warranty and CHRISTINI reserves the right to direct any warranty request relating to those Other Original Components to said manufacturer's customer service department.

THESE WARRANTIES DO NOT COVER:

- Failures or required services which are not due to a defect in material or factory workmanship.
- Replacement of expendable maintenance items including, but not limited to:
- Bearings, including linear bearing
- Seals and O-Rings
- AWD Clutch Basket, Plates, and Friction Plates
- Shaft Bellows
- AWD Engagement cable and housing
- Sprockets and Drive Chains
- Parts or accessories affected or damaged by:
- Normal wear
- **Finish, including frame, anodized machine parts, and coatings on gears, sprockets and driveshafts**
- Improper maintenance including improper clutch settings
- Lack of proper maintenance
- Improper installation
- Deterioration from exposure to the elements
- The unauthorized alteration of any part
- The incorporation or use of unsuitable attachments or parts
- Unsuitable use in an application for which the part was not designed
- Neglect
- Misuse
- Abuse
- Vandalism

Failures caused by or related to any modification not approved by Christini Technologies, Inc.

- Failures caused by or related to any installation of any parts or kits designed for “competition only” use
- Use for the following activities: which will VOID these warranties:
 - Racing
 - Competition
 - Rental

LIMITED REMEDY

Unless otherwise provided, the sole remedy under the above warranty or any implied warranty is limited to the replacement of defective parts with those of equal or greater value at the sole discretion of CHRISTINI. No cash refunds will be offered under this warranty and you will be responsible for labor costs associated with warranty replacements. IN NO EVENT WILL CHRISTINI AWD BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT PRODUCTS LIABILITY, INCLUDING, WITHOUT LIMITATION, PERSONAL INJURY DAMAGES, PROPERTY DAMAGE, OR ECONOMIC LOSSES.

Note: In those states that do not allow the exclusion or limitation of incidental or consequential damages, the above limitation or exclusion may not apply to you.

EXCLUSIONS

The above warranty, or any implied warranty, does not cover normal WEAR AND TEAR, and all warranties are void if the motorcycle is used for other than normal activities, including, but not limited to, the failure to follow the directions for assembly, the instructions, warnings and advice found in the owner's manual or using the motorcycle for commercial activities or in competitive events, including off road racing, motocross racing, stunt riding, ramp jumping or similar activities and training for such activities, or events. This warranty does not cover any damage, failure, or loss caused by accident, misuse, abuse, neglect, improper assembly, improper maintenance, or use of parts or devices not consistent with the original intent for the product sold.

CHRISTINI TECHNOLOGIES MAKES NO OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED, IN DURATION TO THAT OF THE EXPRESS WARRANTIES STATED ABOVE. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. The warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

WHAT YOU SHOULD DO

Always wear a helmet while riding. Please remember to always ride safely and in control and within your capabilities and limitations. Even under normal riding, motorcycles can be dangerous due to changing and variable riding conditions including known and unknown hazards.

WARRANTY CLAIM PROCEDURE

- If a part is determined to be defective, return said part to your dealership for verification of a defect.
- The dealer will verify whether the part is defective. If the part is determined to be defective by the dealer, the part will be replaced and the amount of the replacement part will be charged to the customers credit card until it is returned to Christini for verification.
- Alternatively, the dealer may opt to send the part in for verification before replacement.
- Upon receipt of the defective part/parts, Christini will determine if the part is eligible for warranty compensation.

If the part is found to be defective, the customer will be credited the full amount of the replacement part.

This Warranty applies only to the Original Owner (first retail purchaser from motorcycle dealer, distributor, or direct from Christini)

Bring your AWD kit or motorcycle along with your purchase receipt or other proof of the date of purchase to the dealer where you purchased the AWD Kit or write to the Warranty Service Department at:

CHRISTINI AWD

421 N. 7th Street, Suite 200

Philadelphia, PA 19123

Phone: (215) 351 9895

Freight costs and any labor charges for part change overs, assembly, repair, or disassembly are the responsibility of the Original Owner and **this Warranty offers no cash refunds.**

Notes:

